




Arch Facts

By
American Arches

Custom Arch Slat Installation

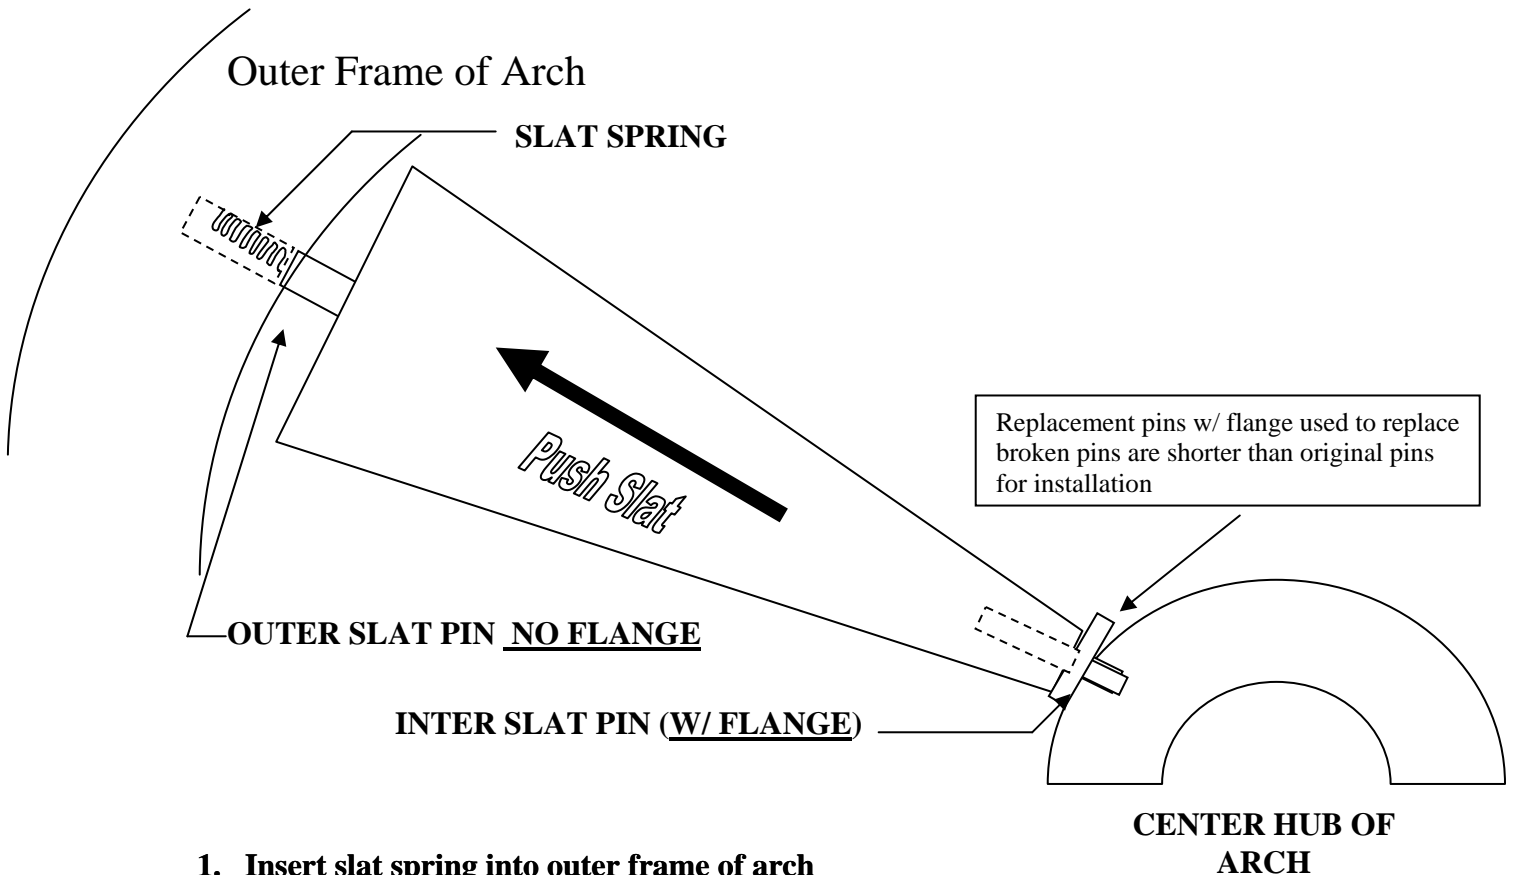

1. Insert slat spring into outer frame of arch
2. Insert outer slat pin (no/flange) into large end of slat
3. Insert inter slat pin (w/flange) into small end of slat
4. Insert arch slat into upper pin hole and press slat up against spring allowing lower slat pin to go into predrilled lower pin hole. Note: new replacement pins are shorter than the original pins

American Arches
11269 Windfern Suite B
Houston, Texas 77064
Tel: 281 955-6779 Fax: 281 955 7339
National 800 Numbers- Tel: 1-888-994-2769 Fax: 1-800-683-9635
Visit us on Line @ www.Americanarches.com